



Layout:

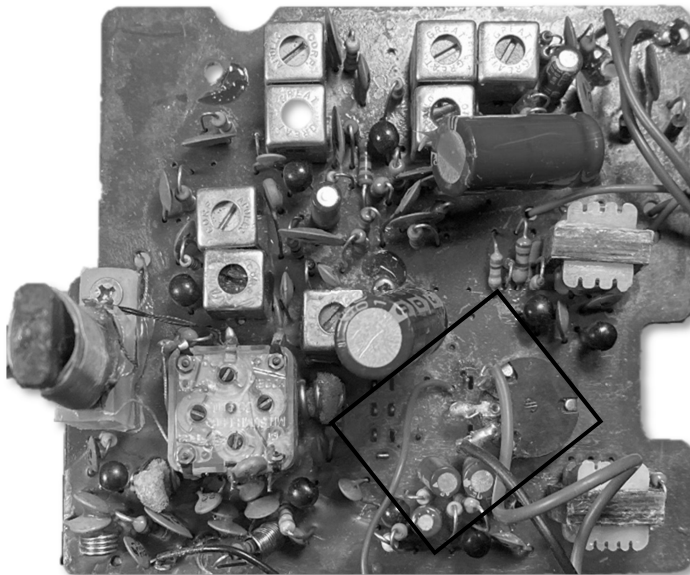

Sears AM/FM radio circuit board removed for alterations

Radio output
and capacitor
moved to switch

Guitar input
injected at
volume

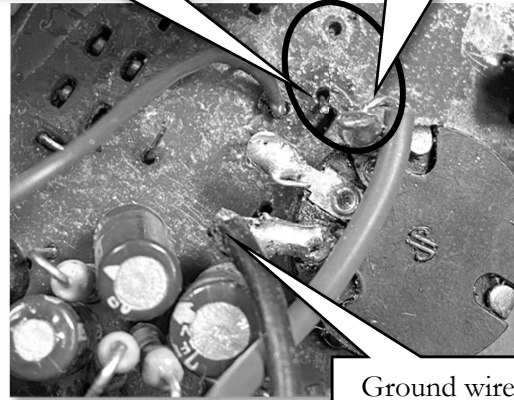

Ground wire
to guitar input
connected to
ground lug

Parts List:

An AM/FM radio that you don't mind altering (and don't mind destroying if it all goes horribly wrong)
Extra lengths of shielded wire to run from the volume put to the guitar input jack.

* Extra wire and a DC input if it needs to be added.

* Either (1) 1/4" phone jack (two conductor with NC switches preferred) or (1) 1/8" mini-phono jack if space is limited.

* (1) 1/4" to 1/8" phone plug converter if mini-phone jack is used.